IP Link® Device Interface Communication Sheet

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type:	Lighting Control
Manufacturer:	Leviton
Firmware Version:	N/A
Model(s):	D4104-1LW, D4106-1LW, D4200-LW, D4206, D4206-1LW, D42AV

Version History:

Driver Version	Date	IP Link Compiler	GC Version	Notes
2	10/8/2010	1.4.0	3.0.4	Added models D4104-1LW, D4106-1LW, D4200-LW, D4206, D4206-1LW.
1	8/4/2010	1.4.0	3.0.3	Initial version.

Driver Notes:

The default ID for this driver is 1. Please change this ID according to your device.

Control Commands & States:

Dimmer Number[1]	1 to 500		
Dimmer[1]	0 to 255 in steps of 1		
Dimming[1]	Up	Down	Stop
Fade Rate Select	0 to 59 in seconds	60 to 239 is 1 to 180 minutes	253 is Photocell Capture
	254 Photocell On	255 Stop fading now	
Net ID[2]	1 to 127		
Preset[2]	1 to 17	Off	

Note:

1. These commands used Dimmer Number as a parameter in which it would control the selected Dimmer Number.
2. Preset will use Device ID as a NetID and it is only available from 1 to 127.

Status Available:

Status is Unavailable

MLC62 Supported Commands:

MLC62 commands are user defined.

Cable and Adapter Requirements:

M/F RS-232 straight serial cable (Extron Electronics P/N 26-433-XX)

Notes for the Device:

Serial communication:

Port Type:	RS-232	**Parity:**	None
Baud Rate:	9600	**Stop Bits:**	1
Data Bits:	8	**Flow Control:**	None

Pin Assignments Diagram:

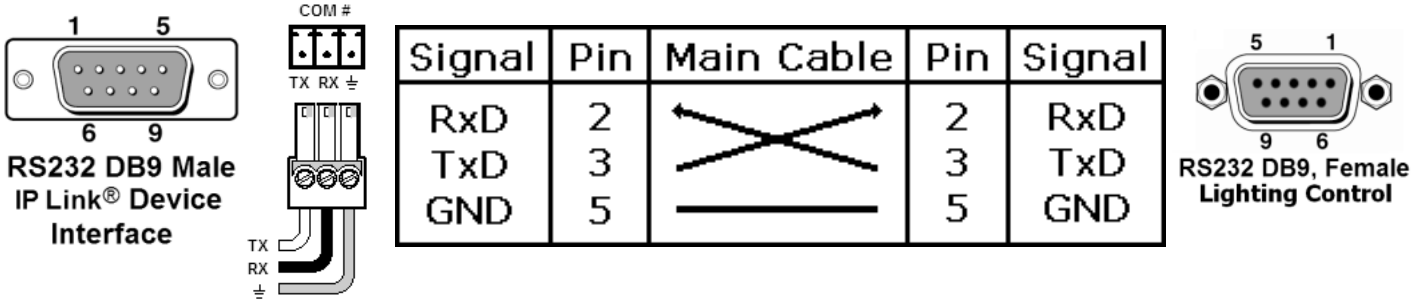

Signal	Pin	Main Cable	Pin	Signal
RxD	2		2	RxD
TxD	3		3	TxD
GND	5		5	GND

Note: Captive screw connector may also be used as a serial connection.

General Notes: